

FASTENERS:  
USE MIN #9 CORROSION  
RESISTANT SCREWS  
(COLOR COORDINATED  
IN EXPOSED AREAS)

DECRA RIDGE VENT:  
COMPRESS BETWEEN  
PANEL BEND UP AND  
HIP & RIDGE


DECRA TILE PANEL:  
BEND UP BACK EDGE 1-1/2"

1" MIN OPENING  
BETWEEN BOTTOM  
OF HIP & RIDGE  
AND TILE PAN

VENT MATERIAL:  
COMPRESS BETWEEN  
PANEL BEND AND  
HIP & RIDGE

DECRA TILE HIP & RIDGE

A 1x4 may be used during  
installation to create an  
adequate air gap between  
the 1x4's and 2x2's.  
Remove before installing  
Hip & Ridge pieces.

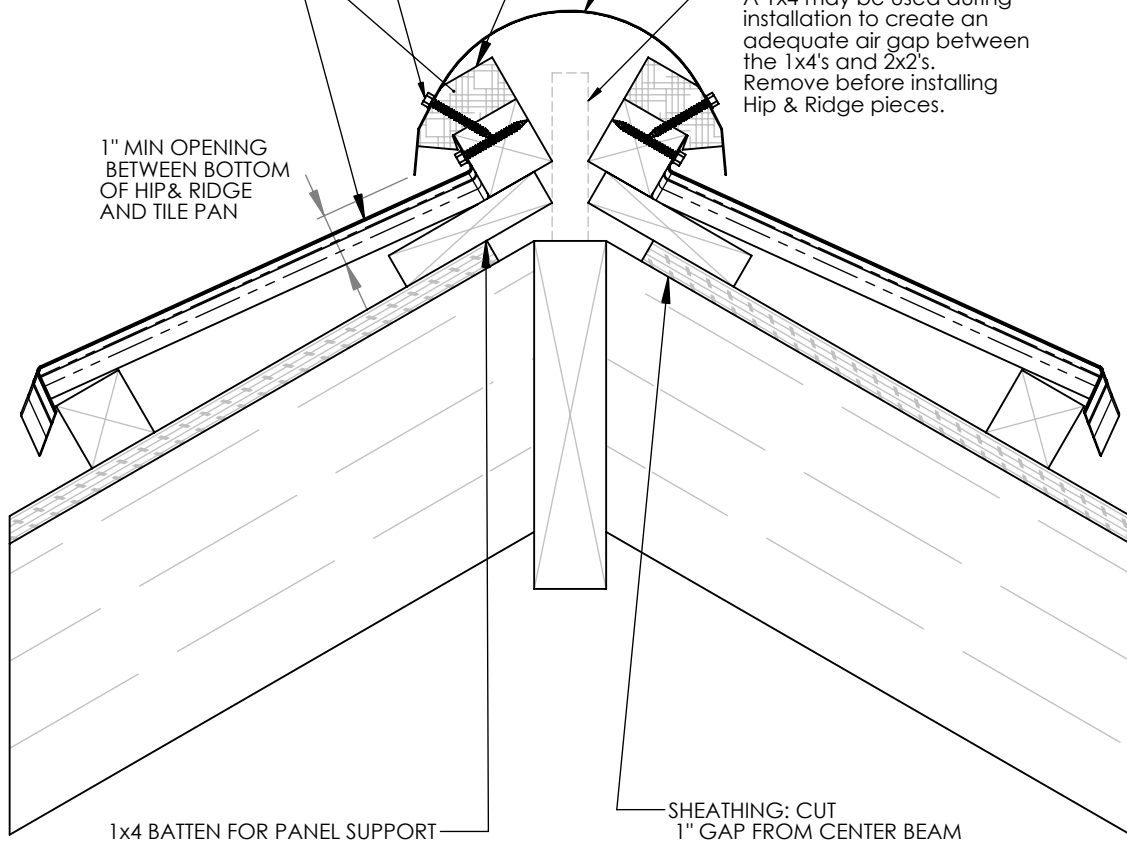

1x4 BATTEN FOR PANEL SUPPORT

SHEATHING: CUT  
1" GAP FROM CENTER BEAM

TITLE  
**Ridge Vent Installation without Center Beam- Tile**

DRAWING No.  
**ARCH2003-1-09a2**

**DECRA ROOFING SYSTEMS, INC.**

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF  
DECRA ROOFING SYSTEMS, INC. ANY REPRODUCTION IN PART OR IN WHOLE  
WITHOUT PRIOR APPROVAL AND WRITTEN PERMISSION IS PROHIBITED.

1230 RAILROAD ST. CORONA, CA 92882 PH (951)272-8180 Fax (951)272-4476

DATE: **05-24-13**

SCALE: **3" = 1' 0"**