


FASTENERS:  
USE 8d CORROSION  
RESISTANT BOX NAILS OR  
MIN #9 CORROSION RESISTANT  
SCREWS (COLOR COORDINATED)

DECRA RIDGE VENT:  
COMPRESS BETWEEN  
PANEL BEND UP AND  
HIP & RIDGE

DECRA SHAKE HIP & RIDGE

A 1x4 MAY BE USED DURING INSTALLATION TO  
CREATE AN ADEQUATE AIR GAP BETWEEN  
THE 1x4'S AND 2x2'S. REMOVE BEFORE INSTALLING  
THE HIP AND RIDGE PIECES.

1" MIN OPENING  
BETWEEN BOTTOM  
OF HIP & RIDGE AND  
PANEL

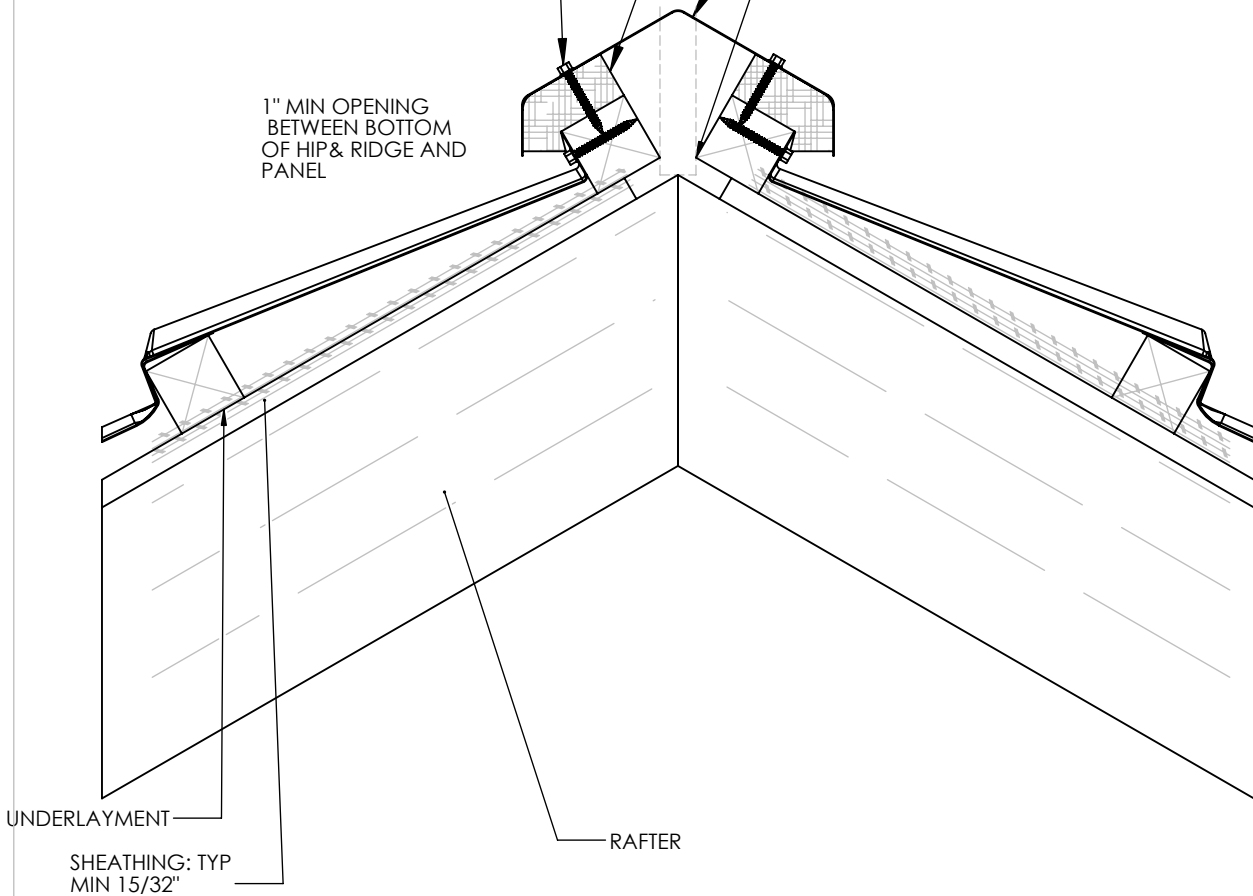

TITLE  
**Ridge Vent Installation without Center Beam- Shake**

DRAWING No.  
**ARCH2003-1-09b2**

**DECRA ROOFING SYSTEMS, INC.**

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF  
DECRA ROOFING SYSTEMS, INC. ANY REPRODUCTION IN PART OR IN WHOLE  
WITHOUT PRIOR APPROVAL AND WRITTEN PERMISSION IS PROHIBITED.

1230 RAILROAD ST. CORONA, CA 92882 PH (951)272-8180 Fax (951)272-4476

DATE: **05-28-13**

SCALE: **3" = 1' 0"**