



Install Shake XD<sup>®</sup> on roof slopes of 3:12 and greater.

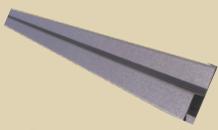

**Short Course Clip**  
(to start panel after a short course)

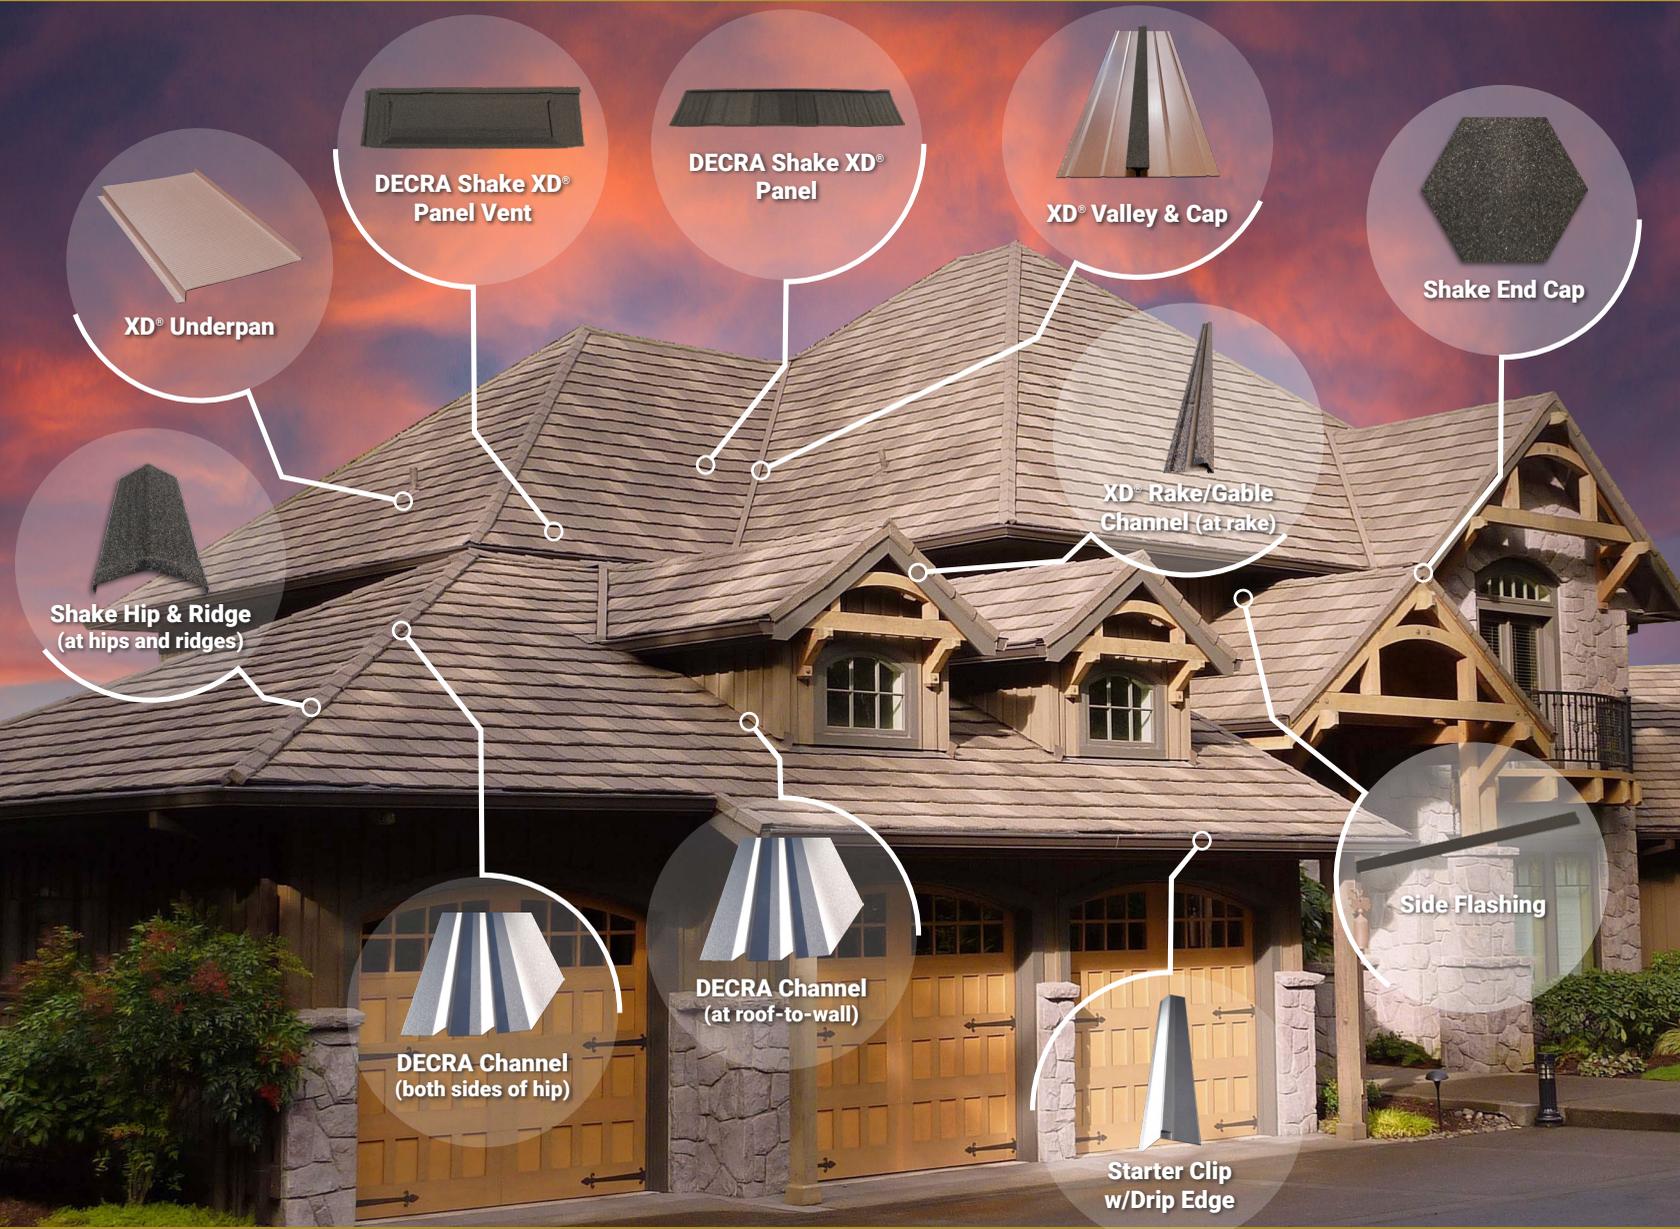

**DECRA Ridge Vent**



**DECRA XD<sup>®</sup> Debris Guard**



**Flat Sheet**



**Corrosion-resistant Screws**

DECRA panel vents should be installed on the last full course below the ridge, and no more than 4 feet down from the peak of the roof facet. Panel vents should NOT be used for air intake.

Use 2 x 2s and / or 1 x 2s at hips and ridges. Additional build up may be required depending on roof slope.